

# TASER 7 Dock Single-Bay Dataport Quick Start Guide



Read, understand, and follow all warnings and instructions before using this product. The most up-to-date warnings and instructions are available at [www.axon.com](http://www.axon.com).



## Setup

These instructions are for using the single-bay (dataport) of a TASER 7 Dock with a personal computer. For instructions on setting up the individual bay with an Axon Dock core module, see the *TASER 7 Dock Installation Manual*.

- 1 Ensure Evidence Sync is installed on the computer. See the *Evidence Sync User Manual* for information on software installation and use.

**Note:** The single-bay only works with Evidence Sync online.

- 2 Plug the DC power cord into the dataport.
- 3 Plug the power cord into a wall socket.
- 4 Plug the USB cable, type B end, into the dataport.
- 5 Plug the USB cable, type A end, into the computer.
- 6 Insert a TASER 7 battery pack into the docking bay.

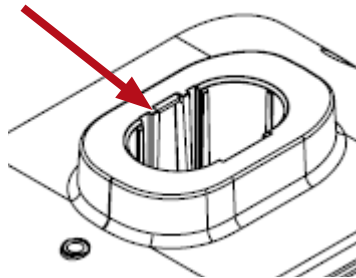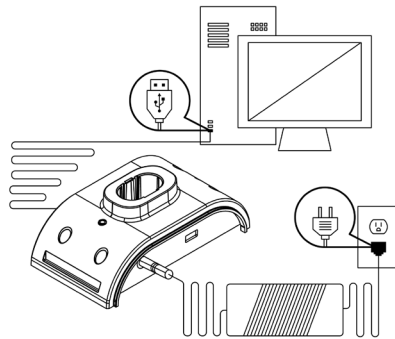

## TASER 7 Conducted Energy Weapon Battery Pack Status

This information is for the single-bay module used in the dataport mode. If the single-bay is attached to an Axon Dock core module, see the *TASER 7 Dock Quick Start Guide*.

Device Status	LED	Recommended Action
Initial connection (momentary)	Solid red or blinking red	Wait
Data uploaded, battery pack ready and fully charged	Solid green	It is OK to use the battery pack in your CEW
In queue awaiting upload	Solid yellow	Wait. Do not remove the battery pack from the TASER 7 Dock.
Uploading data or bay/battery pack firmware update	Blinking yellow	Wait. If the bay is empty, do not insert a battery pack into the bay. If a battery pack is in the bay, do not remove the battery pack.
Battery pack error	Blinking red	Remove and re-insert the battery pack. If the LED still blinks red, contact your agency administrator.
Log file failed to transfer from CEW to battery pack on previous attempt; battery charging	Blinking blue and yellow	Remove the battery pack from the bay module and insert it in the CEW. Wait until the hourglass icon disappears from the Central Information Display. Re-insert the battery pack in the bay module.
Log file failed to transfer from CEW to battery pack on previous attempt; battery pack ready and fully charged	Blinking blue and green	It is OK to use the battery pack in your CEW. Logs from the previous weapon did not transfer to Axon Evidence.
Other	LED off	If the bay is empty, insert a battery pack. If a battery pack is inserted in the bay and the LED is off, contact your agency administrator.

